

NOVASTONE BASE INSTALLATION INSTRUCTIONS



NOVASTONE BASE INSTALLATION INSTRUCTIONS



NOTE: Read and understand all instructions before installing base.

GENERAL SHOWER INFORMATION

- Due to weight of base, 2 people may be needed to install shower.
- Walls must be plumb to a 2-3mm tolerance where shower is to be installed.
- Floor must be square to wall.

NOVASTONE BASE//



PARTS LIST

INCLUDED

- **1.** Shower Base
- 2. Silicone & Adhesive

NEEDED

- 1. Caulking Gun
- 2. Level
- 3. Easy Clean Waste
- **4.** Tape Measure

IMPORTANT INFORMATION

Please read all instructions and warranty information before beginning installation.

It is assumed that this instruction is being carried out by qualified trades-people.

The Novastone shower base is a durable product but care must be taken during installation. Rough handling, impacts to wall flanges and other areas can cause unnecessary breaks which are not covered under warranty.

Please carefully **lift** and **lower** the shower base into position. Suction handles as used by glaziers can be very useful for this. **DO NOT DROP, HIT OR SLIDE SHOWER BASE.**

Once out of it's freight packaging and after installation we firmly recommend keeping the surface covered to remove the risk of unnecessary damage i.e. dropped tools, tiles, glass, paint etc. The packaging can be easily cut down/modified to make a covering until work is complete.


NOVASTONE BASE INSTALLATION INSTRUCTIONS



INSTALLATION INSTRUCTIONS

1. DRY FITTING THE BASE

- Clean/prepare floor surface in accordance with directions on adhesive. Check floor for level surface, noting any humps and falls. The floor must be completely clean and free from all dust. Walls should be plumb.
- Fit the shower base into position by carefully lifting and lowering into place. The shower base must fit square/plumb to adjacent walls and be rock solid under foot.
- Ensure inside face of the upstand is flush with the Gib (FIG 2).
- If required, us plastic H packers to level shower base in all directions, particularly through the drain channel (FIG 1).
- Once sitting level and in correct position, carefully remove tray. Secure H packers to the floor to prevent them shifting when refitting tray.

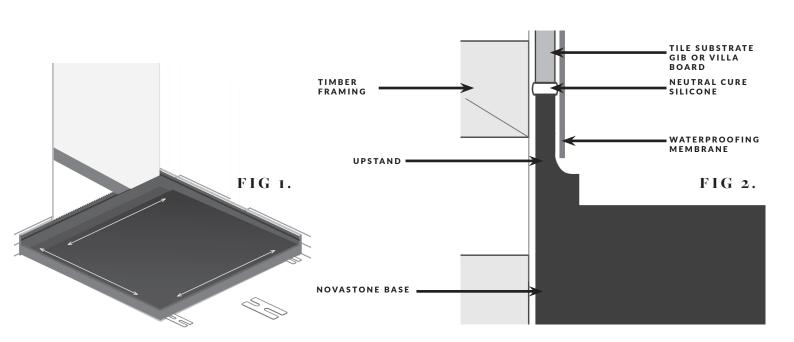



NOVASTONE BASE INSTALLATION INSTRUCTIONS



2. FIX THE SHOWER BASE IN PLACE


- Carefully stand shower on edge in vertical position.
- Apply dobs of construction adhesive where each vertical and parallel support meet, making a grid formation (FIG 3).
- Enough adhesive must be applied to contact with the floor and when set will provide a full and even support.
- Re-position shower base in place as per dry fit. Check again for level.
- Seal between top of upstand and bottom of Gib with silicone, ensuring the inside face of both are flush. (FIG 4)
- Allow adhesive to fully set for at least 8 hours before standing on the shower base.

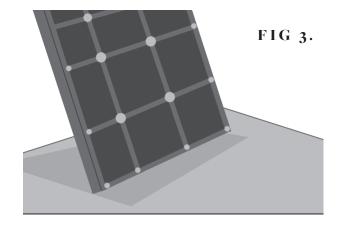



3. WATERPROOFING

Crest Showers recommends applying a waterproof bandage covering the join between the top of the upstand and the bottom of the Gib board before applying waterproofing membrane down to the bottom of the upstand. However, it is up to your registered waterproofer's discretion whether they wish to follow this recommendation.

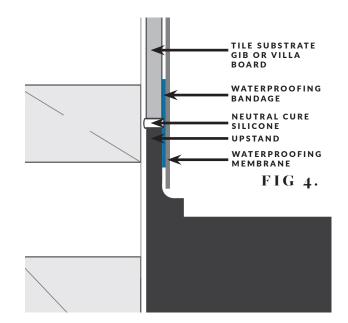

NOVASTONE BASE INSTALLATION INSTRUCTIONS



14. NOVASTONE WARRANTY

Crest Shower Systems warrants that when installed as per the supplied instructions, the Novastone Shower System will be free from manufacturing defects for a period of 25 years from the date of sale. This means that apart from the typical surface splash, no water will be allowed to leak into the building structure for a minimum of 25 years.

25 YEAR WARRANTY

NOVASTONE WATERPROOF SHOWER BASE

All products supplied by Crest Shower Systems exceed the requirements of the New Zealand Building Code and all glass is manufactured to meet AS/NZS2208 1996 Grade A Safety Glass and is permanently marked as such in accordance with the code.

Crest Shower Systems will supply replacement parts or product at it's discretion, free of charge where product is covered by this warranty and proof of defect has been received within 100 days of first appearance. To ensure warranty remains valid, the supplied care and maintenance instructions must be adhered to and the Crest Warranty form supplied with the product must be complete and returned at time of purchase (hard copy or Online). Warranty is non-transferable.

Crest will be liable for the replacement of products or components including their installation, or for an equivalent product including its installation, should the supplied product or component be declared defective by an authorised Crest Shower Systems representative. Beyond this, Crest will not be liable for any damages including incidental or consequential damages related to the use of this product.

Warranty does not apply to the following situations:

- Base has been improperly installed.
- Base has been misused or damaged.
- Base damaged or defective prior to installation.
- Supplied instructions were not adhered to during installation. Note: Discretion must have been used at all times by installer as each situation may vary.

INSTALLATION WARRANTY

Your approved Crest shower installer should provide you with a written 5 year minimum installation workmanship warranty. Product warranty applies regardless of who has installed the shower.

WARNING

This Novastone Base has just been installed.

PLEASE DO NOT WORK IN OR AROUND THE SHOWER UNTIL

Any queries feel free to ring me on:

Best Regards
Your Shower Installer



CREST SHOWER SYSTEMS

W: www.crestshowers.co.nz E: sales@crestshowers.co.nz P: 0800 40 40 42